

Information and safety recommendations

Validity


This Specification Manual 2018 is valid from February 2018. With the appearance of this manual previous manuals are no longer valid. The actual technical documentation can be downloaded on www.akatherm.com.


This document is protected by copyright. The resulting rights, in particular those of translation, reprinting, reuse of illustrations, the radio broadcasting, reproduction by photo-mechanical or similar means, and storage in data processing systems, are reserved.


This Specification Manual is produced with extreme care. All measurements and weights are approximate and errors and changes reserved. Akatherm BV does not accept any liability for damage caused by not or incorrect mentioned data in this manual.

Important information and pictograms

This manual contains pictograms to emphasize important or beneficial information.

 Important information to take into account

 Consult the Akatherm HDPE sales office

 Benefit


Disclaimer

Follow all applicable national and international assembly, installation, accident prevention, safety regulations and the information in this Specification Manual during the installation of drainage systems.

Also follow the applicable laws, standards, guidelines, regulations and instructions for environmental protection, professional associations and the local utility companies.

Applications not covered in this Specification Manual (special applications) require consultation with our Technical Department. For specific advice consult the Akatherm HDPE sales office.

The planning and installation instructions are directly related to the respective Akatherm HDPE products. The reference to standards or regulations is on a general level. Be aware of the current status of guidelines, standards and regulations. Other standards, regulations and guidelines regarding the planning, installation and operation of drainage or building systems need to be taken into account also and are not part of this Specification Manual.

 Please check for your safety and for the proper application of our products at regular intervals if your present Specification Manual has been replaced by a new version. The issue date is always mentioned on the cover. The valid technical information can be obtained at your Akatherm HDPE wholesaler, the Akatherm Export Sales Office and be downloaded at www.akatherm.com.

Safety and operating instructions

- Read the safety and operating instructions for your own safety and the safety of others carefully and completely before start of installation.
- Store the operating instructions and keep them available.
- If the safety instructions or operating instructions are unclear, please contact the Akatherm HDPE sales office.

General precautions

- Keep your work area clean and free of obstructing objects.
- Provide adequate lighting of your work area.
- Keep unauthorized persons away of tools and the work area, especially at renovations in inhabited area.
- Use only Akatherm HDPE system components.

During assembly

- Always read and follow the operating instructions of the respective used tool.
- Improper use of tools can cause severe cuts, cause bruising or dismemberment.
- Improper use of tools can damage components and cause leaks.
- Pipe cutters have a sharp blade. Store and handle without risk of injury.
- Note, when cutting the pipes, the safety distance between holding hand and cutting tool.
- Never grip the cutting zone of the tool or moving parts during the cutting process.